


PRODUCT TECHNICAL BRIEF

CBVAC JFB-250/2201 Hybrid-Bearing Turbomolecular Pump

CBVAC JFB-250/2201 Hybrid-Bearing Turbomolecular Pump - LeakLab solutions for leak testing, vacuum systems and test equipment.

[Open the current source page](#)

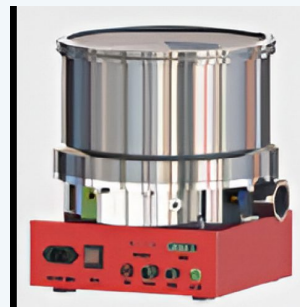

Technical Data

PARAMETER	PUBLISHED VALUE / INFORMATION
Pumping speed	2,050 L/s for nitrogen; 1,800 L/s for helium
Ultimate pressure	$<5 \times 10^{-7}$ Pa with CF inlet; $<5 \times 10^{-6}$ Pa with LF/ISO-K inlet
Compression ratio	1×10^{10} for nitrogen; 1×10^4 for helium
Main inlet	DN250 LF/ISO-K or CF250
Foreline connection	DN40 ISO-KF; optional KF50 stated in source record
Recommended backing pump	16-24 L/s
Maximum continuous foreline pressure	200 Pa for nitrogen; 100 Pa for helium
Nominal / standby rotor speed	24,000 / 16,800 rpm
Supply and maximum power	220 V AC $\pm 10\%$, 50/60 Hz; up to 1,000 W
Interfaces	RS-485 Modbus RTU, DB15 and local controls
Cooling	Air or water; source water specification ≥ 1.5 L/min at 15-25 °C
Approximate weight	40 kg LF; 45 kg CF

Technical and Project Information

DN250 turbomolecular pump with 2,050 L/s nitrogen and 1,800 L/s helium pumping speed in the source technical table. LF and CF inlet versions, Modbus control, grease-lubricated ceramic ball bearings and air or water cooling support large process chambers.

CBVAC JFB-250/2201 Turbomolecular Pump

The JFB-250/2201 is a DN250 high-throughput turbomolecular pump with grease-lubricated ceramic ball bearings. LF/ISO-K and CF configurations address different cleanliness and ultimate-pressure requirements.

The model is commonly described as a 2200 L/s class pump, while the detailed source table states 2,050 L/s for nitrogen. Confirm the current guaranteed speed, controller, flange, cable, purge and cooling set by ordering code.

Rigid aligned mounting, guarded lifting, pressure-based start logic, cooling interlocks and controlled venting are required.

- Vacuum Pumps Atmosphere-to-High-Vacuum Dry Pumps High-Vacuum Pumping Stations Ion Pumps KYKY RV Rotary-Vane Pumps Roots Booster Pumps Screw Vacuum Pumps Tank Evacuation Systems Turbomolecular Pumps Grease-Lubricated KYKY Turbomolecular Pumps JFB Ceramic-Bearing Turbomolecular Pumps KYKY CXF Magnetically Levitated Turbomolecular Pumps KYKY FF Turbomolecular Pumps for Vacuum Insulation MTP Magnetically Levitated Turbomolecular Pumps
- Atmosphere-to-High-Vacuum Dry Pumps
- High-Vacuum Pumping Stations
- KYKY RV Rotary-Vane Pumps
- Roots Booster Pumps
- Screw Vacuum Pumps
- Tank Evacuation Systems
- Turbomolecular Pumps Grease-Lubricated KYKY Turbomolecular Pumps JFB Ceramic-Bearing Turbomolecular Pumps KYKY CXF Magnetically Levitated Turbomolecular Pumps KYKY FF Turbomolecular Pumps for Vacuum Insulation MTP Magnetically Levitated Turbomolecular Pumps
- Grease-Lubricated KYKY Turbomolecular Pumps
- JFB Ceramic-Bearing Turbomolecular Pumps
- KYKY CXF Magnetically Levitated Turbomolecular Pumps
- KYKY FF Turbomolecular Pumps for Vacuum Insulation
- MTP Magnetically Levitated Turbomolecular Pumps
- Helium Reference Leaks
- Scanning Electron Microscopes
- Leak-Detector Accessories

WORLDWIDE PROJECT CONTACT

Send the test object or system, operating conditions, target sensitivity or pressure range, applicable standard, destination country, quantity and schedule. LeakLab will review the project scope.

mail@leaklab.org

Regarding: CBVAC JFB-250/2201 Hybrid-Bearing Turbomolecular Pump

Specifications, standards, verification scope, availability and commercial terms must be confirmed for the exact configuration and destination jurisdiction before order or project acceptance.